



## I. Quick Detach/Lock Ring Operation Guide



Turn the Cam Lever leftward to its unlocked position. Place the QD mount on the Picatinny rail at a desired position. Seat the cross bolt at the bottom of the ring into a selected Picatinny slot.



Turn the Cam Lever from left to right to begin locking the QD mount on the rail, but do not complete the locking motion, leaving some travel distance to allow for adjustment.



Use the included Allen wrench to adjust the Hex Screw at the side of the cam for proper tension and fit against the rail. Adjust clockwise to increase the tension and tighten the clamping width. Adjust counter-clockwise to decrease the tension and increase the clamping width.



The optimal tension is achieved when the side plate first makes contact with the Picatinny rail while the Cam Lever still has enough travel left for you to securely snap into its locking position. Once you achieve the optimal tension, push the Cam Lever all the way to the right for a positive lock onto the rail. You may repeat Step 2 and 3 if needed to find the best clamping tension and locking position for your mount on the rail.

## II. Flip-To-Side Feature



To flip the ring to its alternate position, firmly grasp the complete device mounted with the ring and pull it backward against the spring-loaded mounting base.



Maintain force on the ring and flip the ring sideways until it snaps into place. Use the same method when flipping the ring upward.

### III. Installation Guide

**CAUTION:** The flip-to-side feature is built on a very robust base with strong spring tension for repeated use. DO NOT attempt to flip the ring sideways or upward when it is not mounted on your firearm with a magnifier, flashlight or laser.

#### Compatible Products

Item	No Insert	With Thick Insert (A)	With Thin Insert (B)	With Both Inserts (B) (A)
RG-MF30QS	Fits 30mm Tube Fits Many Popular Magnifiers with a 30mm Tube Diameter	N/A	Fits 27mm Tube LT-EL228Q LT-EL228Q-A LT-EL338Q LT-ELF240 LT-ZL337Q	Fits 25.4mm/1" Tube LT-EL268 LT-EL268-A LT-TL099PR2 LT-ZL168 LT-EL700



1. Disassemble the top ring half by unscrewing the 4 locking screws with the included Allen Wrench.

2. Slide the appropriate insert(s) over the body of the device. Oversized end cap on some devices may need to be removed first. The end with flange goes on first toward the front of the device. If using 2 inserts, slide Insert A over the light body first, followed by Insert B.



3. Place the tube of the device, with inserts if applicable, onto the ring base.

3. Reinstall the top ring half back by tightening the 4 locking screws with the included Allen wrench in an alternating pattern to complete installation. Do not over-tighten the screws.