



SSSR MODEL 4/15

CAR LENGTH SYMMETRICAL SPLIT SLIM-RAILS
MTU001S

- Made in USA, Precision Machined with Maximum Strength
- Innovative Left/Right Identical Design for Direct Replacement of CAR Length Model 4 Handguard
- 14 Top/bottom Slots, Slim Profile and Super Light Weight for Great Comfort and Smooth Handling
- Detachable Side Rails and QD Swivel Housings for Most Unique and Personalized Accessory Applications
- Simple and Friendly Installation, No Gunsmith or Tool Required
- Hard Anodized Finish for Wear Resistance



MTU001S

SSSR MODEL 4/15


CAR LENGTH
SYMMETRICAL SPLIT
SLIM-RAILS

Made in USA

MODEL 4/15 CAR LENGTH SSS RAILS INSTALLATION GUIDE

MTU001S

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all time.

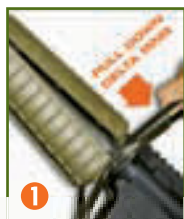

1. Use a handguard removal tool to pull down Delta Ring and remove the handguards.



2. Separate left and right metal covers. Note that the two covers are designed identically and are interchangeable.



3. Install the two covers by aligning the inner 3 Spinal Cords against the side central groove area on the Barrel Nut.


a). Hold the left and right covers on each hand to align the inner 3 Spinal Cords at the taper end of the cover with the corresponding Barrel Nut groove area on each side correctly. Keep the two covers open outward during and after alignment.

b). Hold the alignment positions, and fold the two covers inward until both of them touch the Front Handguard Cap of your rifle.

c). Hold the two covers in aligned positions, press them downward simultaneously to press back Delta Ring, and then release toward the front barrel to allow the Front Handguard Cap to fit snugly inside the front rim of the two covers.



4. Tighten all 4 screws using the provided 3mm Allen Wrench to secure the 2 covers. If needed, apply thread locking compound to screws during installation. The SSSR handguard is now ready for most versatile accessory applications.

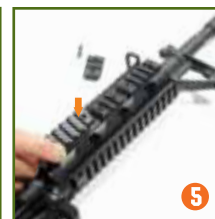

5. (Optional): Adjust the position of Removable Side Rails with the provided 2.5mm Allen Wrench for your own unique and personalized application.



SIDE CENTRAL
GROOVE AREA

FRONT
HANDGUARD CAP



ALLEN WRENCHS



3MM ALLEN WRENCH

2.5MM ALLEN WRENCH

Note: Apply thread locking compound on screw threads for solid locking if needed.