



## AR STYLE MODEL 308

### 2-PIECE DROP-IN MID LENGTH QUAD RAILS

for Mid Length AR Style .308 Rifle with Round Front Cap

Item NO.: MTU018

- Proudly Designed and Manufactured in USA
- Fits Mid Length AR Style .308 Rifle with Delta Ring and Round Front Cap
- Four Mil-spec Picatinny Rails, Each with 19 Slots for Versatile Accessory Applications (Top Rail Height from Center Bore is 1 1/4" After Installation)
- Precision Machined from Aircraft Aluminum with Black Anodizing
- Solid Locking Features for Most Secure Fit, Ultimate Tactical Solution to Enhance Accuracy Under Toughest Environment
- Simple and Friendly Installation, No Gunsmith or Tool Required

MTU018



## AR STYLE MODEL 308

### 2-PIECE DROP-IN MID LENGTH QUAD RAILS

for Mid Length AR Style .308 Rifle with Round Front Cap

Item NO.: MTU018

Made in USA

## AR STYLE MODEL 308 2-PIECE DROP-IN MID LENGTH QUAD RAILS INSTALLATION GUIDE


MTU018

Caution: Make sure firearm is not loaded. Remove magazine and examine chamber. Use safe handling procedures at all times.



1

Use a handguard removal tool to pull down Delta Ring and remove the handguard.

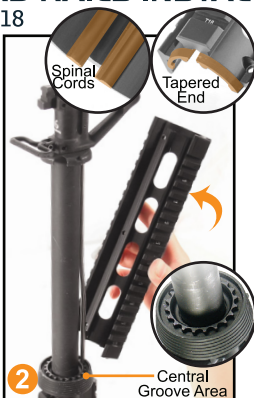

2

Separate the Top Cover (with 3 rails) from the Bottom Cover (with 1 rail). Identify the Tapered End of the Top Cover and install it onto the rifle by aligning the inner 2 Spinal Cords against the Central Groove Area in the barrel nut and push for a tight fit. The top rail of the Top Cover should lined up with the receiver top.




3

Press downward the Top Cover to push down the Delta Ring, and then release forward and toward the barrel to snugly cover the Front Handguard Cap. Make sure that the Top Cover is well situated. If the Top Rail of the Top Cover is not centered with the receiver top, minor adjustment on the Barrel Nut is required. Repeat step 2 and 3 until the optimal indexing is achieved.



4

Repeat the method in Step 2 and 3 for the Bottom Cover Installation. When complete, the Front Handguard Cap would be securely enclosed inside the handguard rail system.

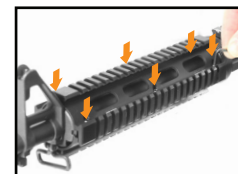

5

Tighten all 6 screws using the provided Allen wrench to secure the Top and the Bottom Covers. Do not over tighten or use power tool for installation. The quad-rail system is ready for most versatile accessory applications.